

# MINI-KORE PENDANT

CENTRO TRAC MOUNT  
REMOTE POWER SUPPLY(S)

## SAFETY INSTRUCTIONS

### CAUTION: READ ALL INSTRUCTIONS.

- Do not install any Pendant System closer than six inches from any curtain or similar combustible material.
- Do not install this system in a damp or wet location.
- Turn off electrical power before modifying the lighting system in any way.
- Ensure the Pendant is attached correctly to the Centro Trac system with no cross threading and is tightened down completely to make contact with the Centro Rail. Refer to "Twist & Click" image below.
- Ensure all connections are tight. Loose connections can cause overheating, arcing and a potential fire risk.
- Use only as described in these Tegan Lighting Installation Instructions.
- Use only Tegan Lighting supplied accessories and Power Supply(s).
- Luminaires may be extremely hot, allow to cool before touching.
- These are 24VDC Pendants; they must be connected to an appropriate 24VDC power supply and compatible 0-10V dimming control. Refer to Specification Sheets.
- For proper installation, have a qualified electrician install this product.
- This luminaire must be wired and grounded in accordance with standard accepted electrical installation practices, local codes, and ordinances.
- Wire supply connections must be made with U.L. or compatible testing agency-approved connectors.


## PRODUCTS OVERVIEW



**Mini-Kore Pendant**  
Aluminum Finish  
Candelabra Gem  
SJ Cord  
MKP-CAND-SJ-AL



**Mini-Kore Pendant**  
Black Finish  
Cylinder Gem  
Stem  
MKP-CYL-S-BLK

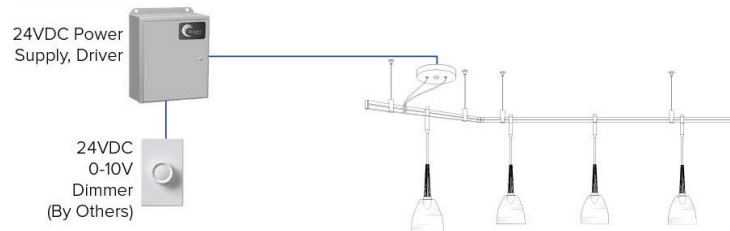

HOW TO SPECIFY IP20 MINI-KORE PENDANTS  
CENTRO TRAC MOUNT

## INSTALLATION

### Mini-Kore Systems

Mini-Kore Pendants connect to a Centro Trac Connector and then connected to Tegan's Centro Trac System.



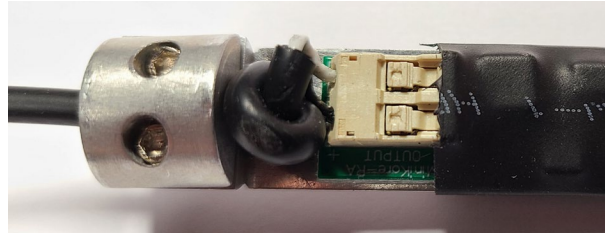


IMAGE OF A CORRECT FACTORY INSTALLATION TO REPLICATE WHEN FIELD-MODIFYING THE MINI-KORE PENDANT STEM OR SJ POWER CORD LENGTH. CONTACT TEGAN LIGHTING @ 415-504-3536 WITH QUESTIONS.

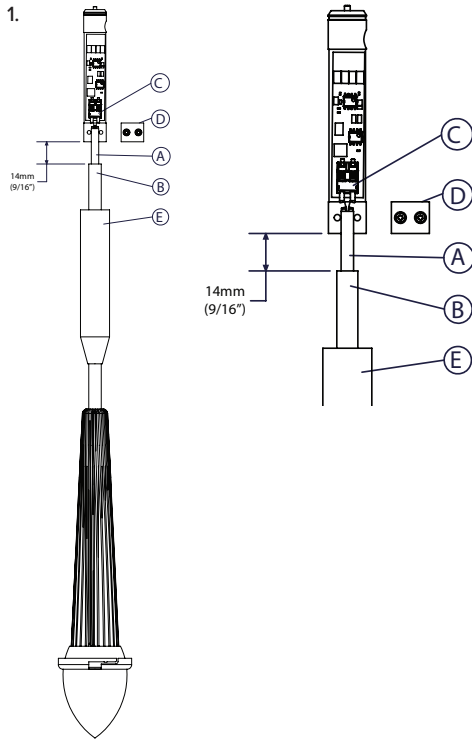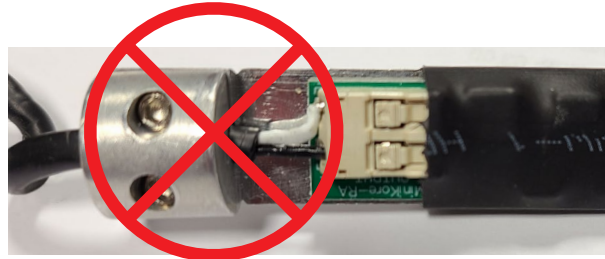


**WARNING:** When the Mini-Kore Pendant power cord is shortened on site, it must be installed correctly, as per factory shipped condition. Per the installation instructions below, a safety knot must be added to secure the cord/shade. **IF NOT MODIFIED CORRECTLY IN THE FIELD WHEN INSTALLED, THE PENDANT/SHADE CAN FALL AND RESULT IN DAMAGE TO THE SPACE AND/OR PERSONS.**

### 1. Field-Cutting Power Cord Length

- Cut and strip cord A to the desired length.
- Optional stem B should be cut as well.
- Create a knot just below the stripped conductors A to fit just above the cable clamp D (as shown in the image above).
- With a small tool, depress tabs on Connector C to allow insertion of wires. Check labels for polarity.
- Re-attach cable clamp D.
- Use cover E to attach the Mini-Kore Pendant to the mating Centro Trac Connector (CTC) utilizing the "Twist & Click" system.

# MINI-KORE PENDANT

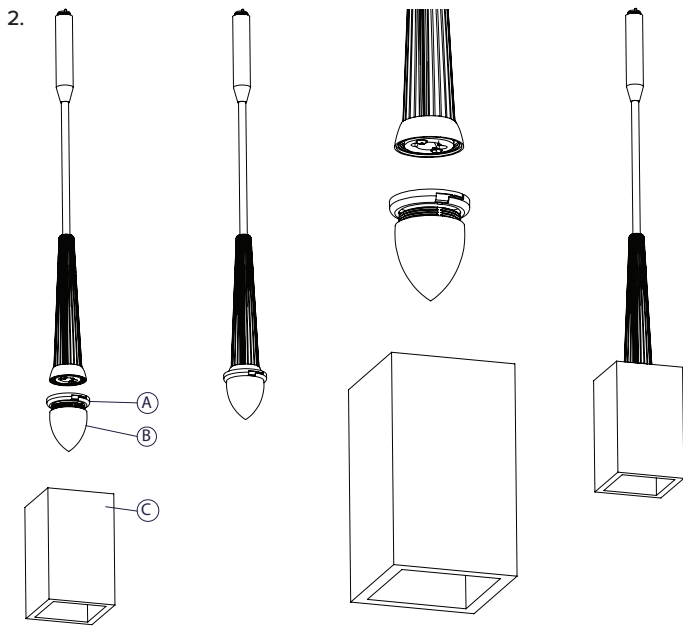

## 2. Attaching Shades

- Insert shade Hub A onto the acrylic Gem B, aligning tabs.
- Thread Gem B into Mini-Kore Module. Make sure it's moderately tight.
- Shade C inserts up into the Hub A and then twists clockwise to snap into place.


## 3. Mini-Kore Pendants are mated with the Twist & Click system D to:

- Centro Trac Connector (CTC) then mounted to the Centro Trac Rail that utilizes Remote Power Supply(s). Push in & twist to ensure the Mini-Kore Pendant is securely locked into the Centro Trac Connector and Centro Trac connection.


## 4. Cleaning Instructions for Shades

- Benton (solid concrete) and Vidro (glass): Clean with a damp cloth with mild soap and water.
- Karton (cardboard): Vacuum gently with a soft upholstery brush only.
- Knitted (yarn): Dry clean or vacuum with a soft upholstery brush attachment. Do not machine wash!

**WARNING:** Do not exceed the maximum number of Pendants on Centro Trac per Power Supply rating. Overloading the maximum wattage number of Mini-Kore Pendants per Power Supply will damage the system. Refer to the Remote Power Supply Spec Sheet for details and power supply maximum wattage loading.

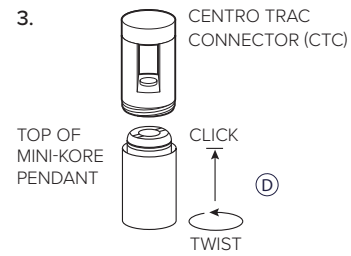

## INSTALLATION EXAMPLE

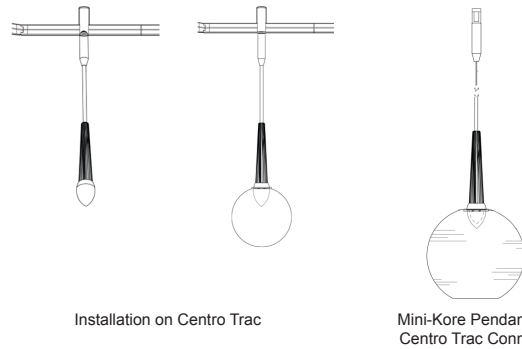

## EXAMPLE OF MINI-KORE PENDANTS W/CENTRO TRAC CONNECTOR (CTC) MOUNTED TO CENTRO TRAC