INSTALLATION & CARE GUIDELINES

SAFETY INSTRUCTIONS

- Do not install any Pendant closer than six inches from any curtain or similar combustible material.
- Do not install this system in a damp or wet location.
- Turn off electrical power before modifying the lighting system in any way.
- Ensure all connections are tight. Loose connections can cause overheating, arcing and a potential fire risk.
- Use only as described in these Tegan Lighting Installation Instructions.
- Use only Tegan Lighting supplied accessories.
- Luminaires may be extremely hot. Allow to cool before touching.
- These are 36VDC Pendants; they must be connected to an appropriate 36VDC power supply. Refer to Specification Sheets.
- For proper installation, have a qualified electrician install this product.
- This luminaire must be wired and grounded in accordance with standard accepted electrical installation practices, local codes and ordinances.
- Wire supply connections must be made with U.L. or compatible testing agency-approved connectors.
- Regular cleaning of these products is important. Switch off at main supply and allow to cool before touching. Clean fittings with a soft damp cloth and allow to dry before reconnecting power supply. Prevent dust from accumulating on finned heatsinks for long life.

PRODUCT OVERVIEW

BUZZISQUARE Series

BUZZIDRUM Series

BUZZIPROP Series

BUZZICONE Series

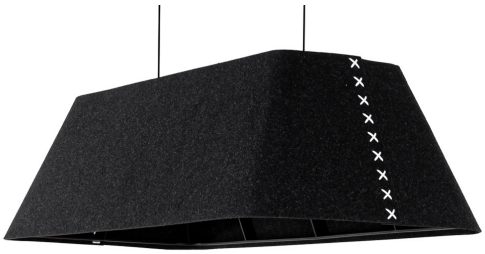

BUZZISQUARE Beam Series

BUZZIPROP Beam Series

BUZZIPLEAT Series

BUZZIJET Series

BUZZISHADE Series

© 2024 Tegan Lighting. All rights reserved.

INSTALLATION & CARE GUIDELINES

1 KORE LED PENDANT
RECESSED DRIVER ENCLOSURE (RDE) INSTALLATION – COMPONENTS

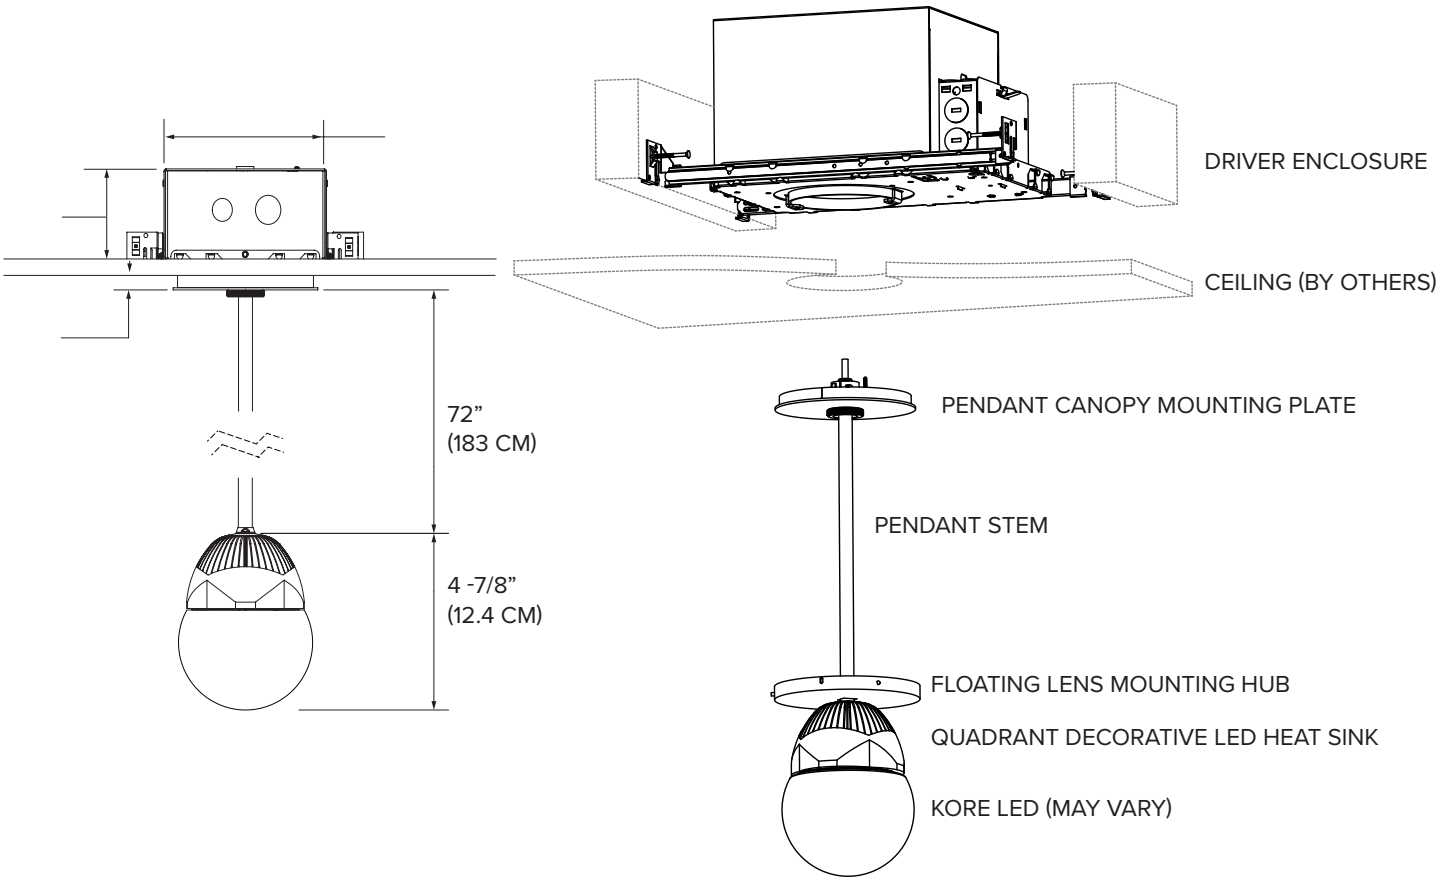

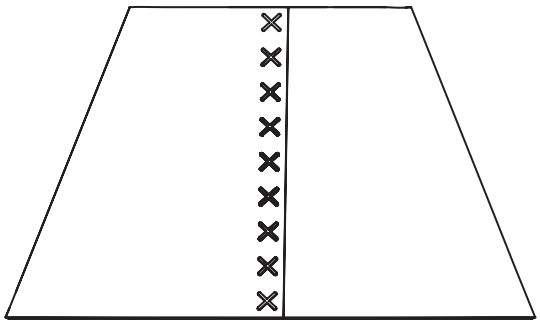

Acoustic Shade Type (Varies)

© 2024 Tegan Lighting. All rights reserved.

INSTALLATION & CARE GUIDELINES

1 KORE LED PENDANT
RECESSED DRIVER ENCLOSURE (RDE) INSTALLATION

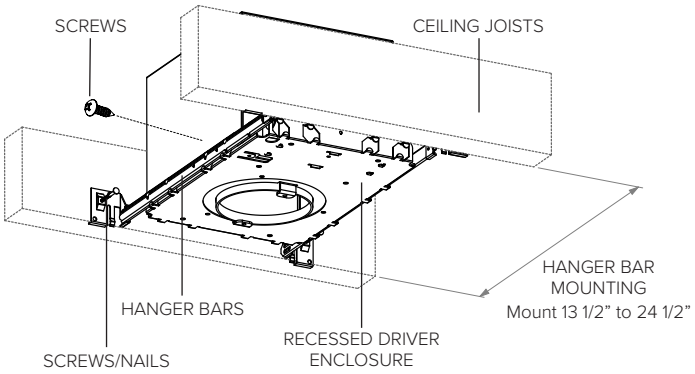

Ceiling Joist Installation

Recessed driver enclosure comes equipped with hanger bars to mount to framing between 13.5" and 24.5" apart. Hanger bars may be re-positioned around metal frame.

1. Spread hanger bars so they extend between ceiling joists. Position housing in correct position between ceiling joists.
2. Affix with screws/nails.
3. Pin hanger bars in position with screws.

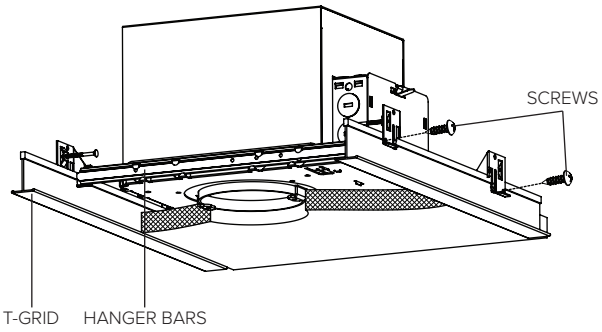

Grid Ceiling Installation

Fixture comes equipped with hanger bars to mount to t-grid between 13.5" and 24.5" apart. Additional Support is required by Building Codes, including hanger wires or threaded rods (not shown).

1. Mark and pre-drill 4" hole in ceiling tile. Spread hanger bars so they extend to t-grid.
2. Pin to t-grid with screws (supplied by others).
3. Pin hanger bars in position with screws.
4. Support Recessed Driver Enclosure independently with hanger wire or threaded rods.

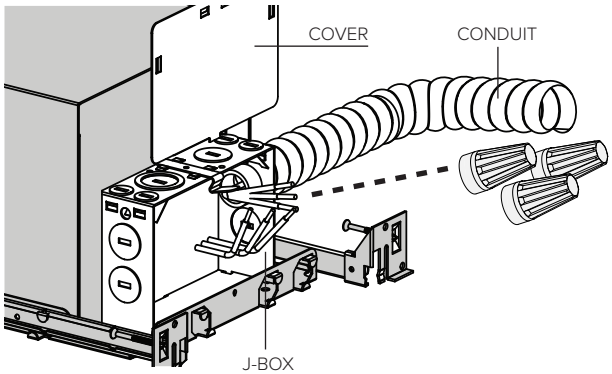

INPUT: HOT	BLACK
INPUT: NEUTRAL	WHITE
INPUT: GROUND	BARE/GREEN
INPUT: DIM PURPLE*	PURPLE
INPUT: DIM GREY*	GREY

*Optional, may vary

Electrical Connection

Provide electrical service according to the "National Electrical Code" and your local electrical code to the junction box (located on the plaster frame). Supply wire insulation must be rated for at least 90˚C.

1. Remove cover of j-box.
2. Bring 1/2" conduit (or cable) to j-box. Use appropriate connector (not provided) for conduit (or cable).
3. Leave at least 12" of free wire length inside the j-box for inspection of splices after ceiling is installed.
4. Using appropriate wire nuts or other connectors, connect white, black and green (from electrical service) to matching colored conductors on input of LED Driver. Ground wire may be bare copper. Place all excess wiring and connections into the junction box and replace the cover. Dimming installation may require other connections.

© 2024 Tegan Lighting. All rights reserved.

INSTALLATION & CARE GUIDELINES

1 KORE LED PENDANT
SURFACE MOUNT DRIVER ENCLOSURE (SMDE) INSTALLATION

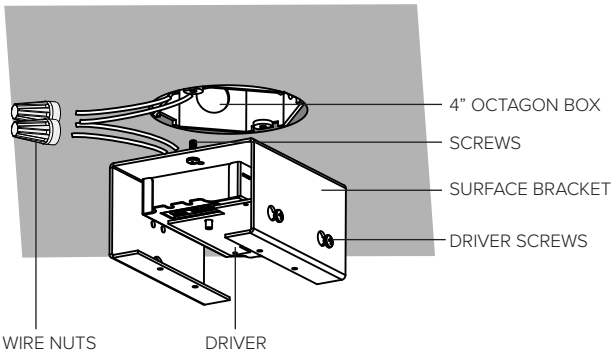

Connect Surface Driver Enclosure

Surface driver enclosure installs to existing 4” Octagon Junction Boxes (rated for 50lbs minimum), which must be securely installed to support weight of fixture.

1. Using appropriate wire nuts or other connectors, connect white, black, and green (from electrical service) to matching colored conductors on input of LED Driver. Ground wire may be bare copper. Place all wires and connectors inside box.
2. Using 8-32 screws, affix surface bracket to 4” octagon box. If necessary, temporarily remove driver by loosening driver screws.

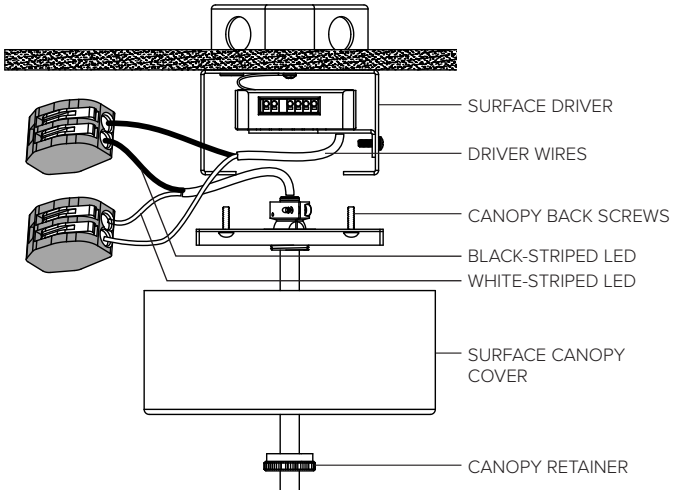

Driver Connections (Surface Driver Enclosure)

1. Strip cord to expose black & white striped conductors.
2. Connect black-striped LED wire to driver minus/black wire. Connect white-striped LED wire to driver plus/red wire with supplied lever connectors.
3. Use four canopy back screws to affix canopy back to installed housing.
4. Ensure all wires and connectors are inside surface driver. Use canopy retainer to affix canopy face to canopy back.
5. Test by applying building power. Do not look directly into LED.

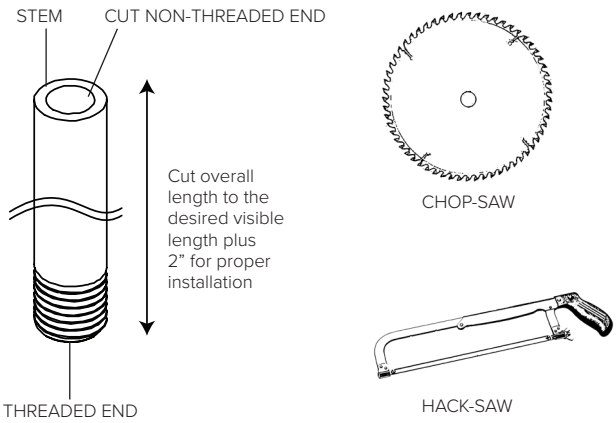

Stem Pendants – Cut stem to length.

6’ stems ship loose with stem pendants and are cut in the field as needed. Stems help support the weight of shades.

1. Based on optional shade and the Kore Pendant LED, calculate cutting length of stem. 2” of stem is required to grip the stem.
2. Using a chop-saw with aluminum-cutting blade or a hack-saw, cut the non-threaded end to the correct size.
3. Debur the cut ends.

© 2024 Tegan Lighting. All rights reserved.

INSTALLATION & CARE GUIDELINES

1 KORE LED PENDANT
RECESSED DRIVER ENCLOSURE (RDE) INSTALLATION - “FINISH”

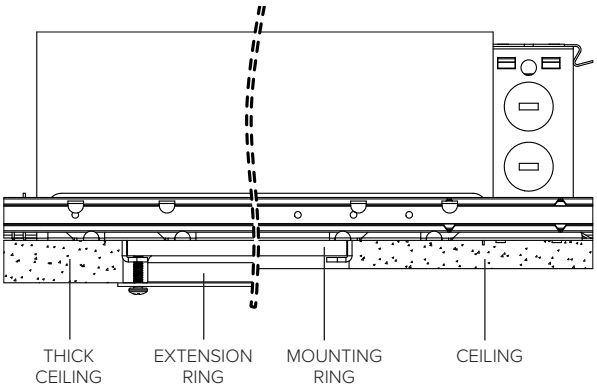

Finish Ceiling

1. Drill a 4” hole in ceiling and install around mounting ring.
2. For thick ceilings use a standard 4” Octagonal raised extension ring (not supplied) to cover edges of ceiling, attached to mounting ring with appropriately long 8-32 fasteners (not supplied).

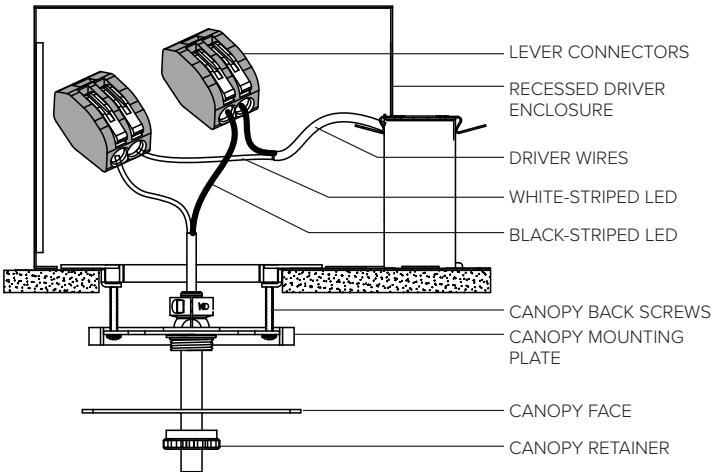

Driver Connections

1. Strip cord to expose black & white striped conductors.
2. Connect black-striped LED wire to driver minus/black wire. Connect white-striped LED wire to driver plus/red wire with supplied lever connectors.
3. Use two canopy back screws to affix canopy back to installed housing.
4. Use canopy retainer to affix canopy face to canopy back.
5. Test by applying building power. Do not look directly into LED.

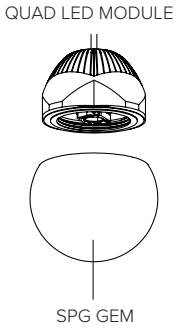

GEM installation

1. GEMS may ship separate from LED module.
2. Sphere GEM (SPG) threads onto quad LED module.

© 2024 Tegan Lighting. All rights reserved.

INSTALLATION & CARE GUIDELINES

1 KORE LED PENDANT
RECESSED DRIVER ENCLOSURE (RDE) INSTALLATION - “FINISH”

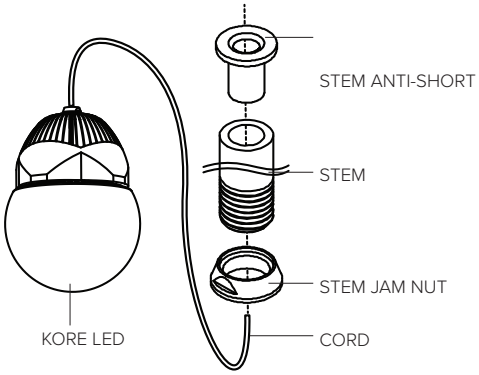

Stem Pendants – Assemble Stem

1. Thread cord through stem jam nut, stem, and stem anti-short.
2. Press stem anti-short firmly into stem.
3. Thread stem jam nut fully onto threaded end of stem.
4. Thread stem into Kore Pendant LED until snug. Tighten the stem jam nut against Kore Pendant LED.
5. Trim excess cord, leaving at least 6” free for electrical connections.

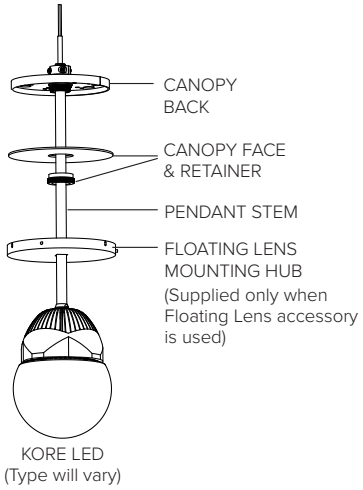

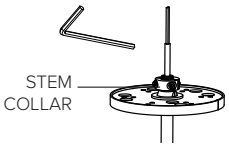

Stem Pendants – Assemble Pendant Hardware

1. Slide floating lens mounting hub, canopy face and retainer, and canopy back over Kore Pendant LED stem.
2. Use allen key to tighten stem collar around stem at proper height.
3. For pendants with a floating lens, the shade mounting hub must be tightened at the proper height around the stem with the shade mounting hub set screw.

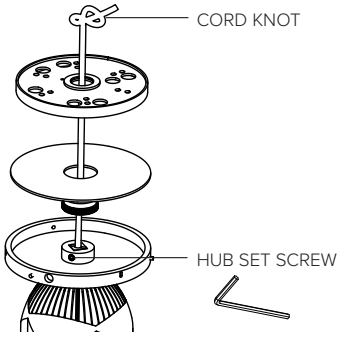

SJ Power Cord Pendants - Assemble Pendant Hardware

1. Slide floating lens mounting hub (optional) with integral cord grip, canopy face and retainer, and canopy back over Kore LED Cord.
2. Tie cord knot in cord at proper height. Trim excess, leaving at least 6” for electrical connections.
3. For pendants with a floating lens, the hub must be tightened at the proper height around the cord with the hub set screw.

© 2024 Tegan Lighting. All rights reserved.

INSTALLATION & CARE GUIDELINES

1 KORE LED PENDANT
BUZZISHADE MEDIUM, LARGE & BUZZISQUARE MEDIUM SHADES
Shades are drop shipped separately fully assembled.

BUZZISQUARE **BUZZISHADE**

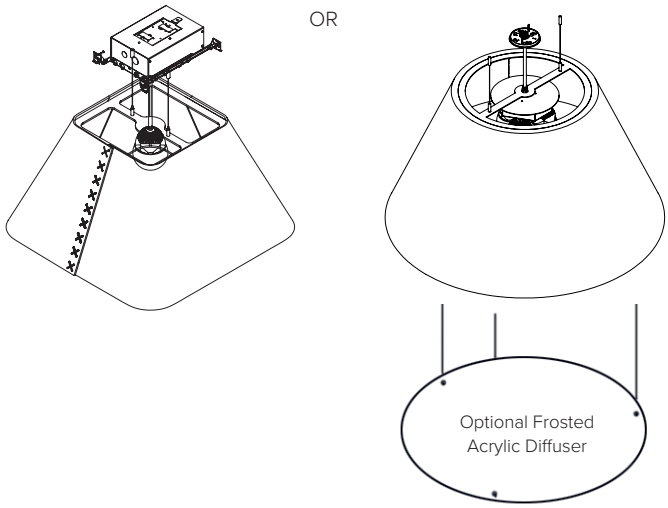

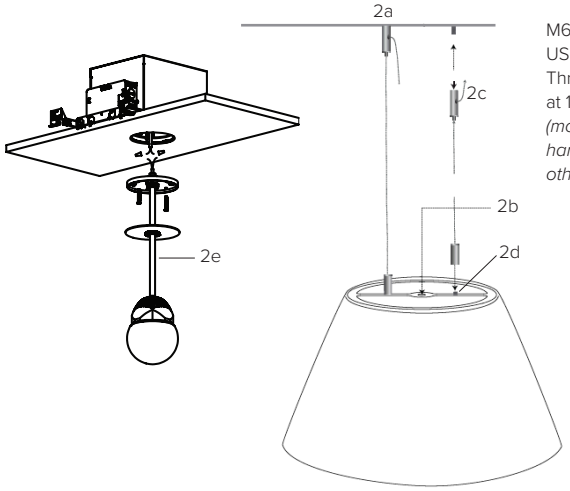

M6 thread.
US version:
Threaded rod
at 1/4 at 28tpi.
(mounting hardware by others).

BUZZISHADE MEDIUM, LARGE & BUZZISQUARE MEDIUM SHADE INSTALLATION

1. UNPACKING: Take care not tear or scratch fabric.
2. Shade is suspended independently from the Kore LED.
   a. Contractor to install shade to a reinforced ceiling to support the shade weight.
      Medium: 8.82 lbs. (4kg)
      Large: 17.64 lbs. (8kg)
   b. Hole (A) in shade fitting must be drilled out to 5/8” (12.7mm) Dia. to allow clearance of Kore LED stem.
   c. Once location of Kore LED Pendant is determined, install (2) BUZZISHADE cable stoppers to ceiling (ceiling screws not included; mounting hardware by others). Thread size of cable stoppers: 1/4 @ 28 tpi.
   d. Attach BUZZISHADE to ceiling cables with hardware provided. Adjust to desired overall height by pulling cables through cable stoppers at ceiling. Trim excess cable with wire cutter.
   e. Install Kore LED Pendant through BUZZISHADE as described in Kore Ambient Instructions above.
3. Optional Frosted Acrylic Diffuser: Insert diffuser suspension cables into grippers on the hub. When visible, pull the cables from the rear (top) until the diffuser is almost touching the shade. Leave a small 1/2” gap for ventilation. Cut or coil up excess cable.
4. MAINTENANCE: Vacuum regularly to keep clean. Do not wash. Do not remove fabric from frame. Treat stains immediately; dry clean professionally or blot with a clean soft damp cloth and a PH neutral soap.

MULTI-KORE PENDANT ASSEMBLY (MKA)

1. See below for installation instructions for BUZZISHADE & BUZZISQUARE Multi-Kore Assembly (MKA) LED Pendants.

© 2024 Tegan Lighting. All rights reserved.

INSTALLATION & CARE GUIDELINES

1 KORE LED PENDANT
BUZZISHADE XL & XXL SHADES
Shades are drop shipped separately, some assembly required.

2.

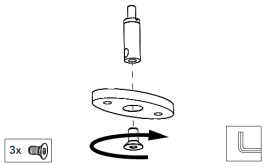

3.

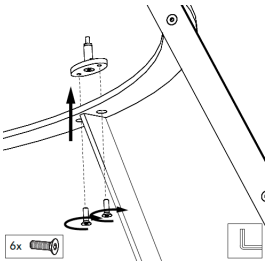

4.

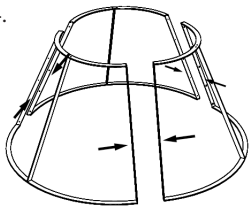

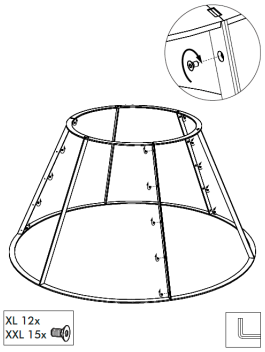

5.

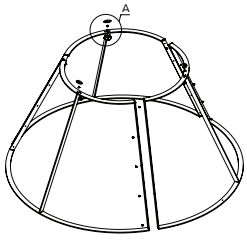

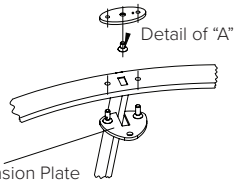

6.

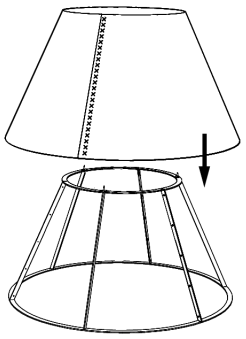

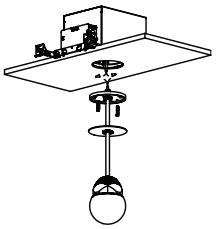

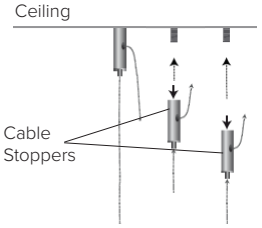

M6 thread.
US version:
Threaded rod
at 1/4 at 28tpi.
(mounting hardware by others).

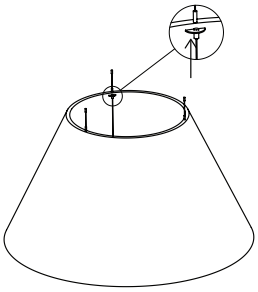

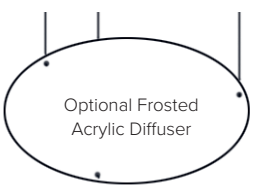

BUZZISHADE XL & XXL SHADES INSTALLATION

Frame Assembly

1. UNPACKING: Take care not tear or scratch fabric.
2. Assemble 3x Hanger Anchors using 3 screws provided.
3. Attach 3x Hanger Anchors to frame with 6x screws provided.
4. Attach 3x frame sections using 12x (XL) or 15x (XXL) screws provided.

If using optional floating lens, go to step 5. If not, skip to step 6.

5. Attach 3x suspension plates under shade frame below Hanger Anchor Base with 3x screws provided. If using optional floating lens:
6. Place BUZZI Felt over shade frame.
7. Proceed to Kore Pendant and Shade Mounting on following pages once Shade assembly is complete.

Shade Mounting

1. Shade is suspended independently from the Kore LED.
   a. Contractor to install Shade to a reinforced ceiling to support the Shade weight.
      XL: 46.74 lbs. (16kg)
      XXL: 56.66 lbs (20kg)
   b. Position Shade so the Kore LED Pendant is centered within the Shade. Refer to Shade Installation Template for BUZZISHADE below.
   c. Once location of Kore LED Pendant is determined, install (3) BUZZISHADE cable stoppers to ceiling (ceiling screws not included; mounting hardware by others). Thread size of cable stoppers: 1/4 @ 28 tpi.
   d. Attach BUZZISHADE to ceiling cables with hardware provided. Adjust to desired overall height by pulling cables through cable stoppers at ceiling. Trim excess cable with wire cutter.
   e. Install Kore LED Pendant through BUZZISHADE as described in Kore Ambient Instructions above.
2. Optional Frosted Acrylic Diffuser:
   Insert diffuser suspension cables into grippers located in suspension plates detailed in the previous page. When visible, pull the cables from the rear (top) until the diffuser is almost touching the shade. Leave a small 1/2” gap for ventilation. Cut or coil up excess cable.
3. MAINTENANCE: Vacuum regularly to keep clean. Do not wash. Do not remove fabric from frame. Treat stains immediately; dry clean professionally or blot with a clean soft damp cloth and a PH neutral soap.

MULTI-KORE PENDANT ASSEMBLY (MKA)

1. See below for installation instructions for BUZZISHADE Multi-Kore Assembly (MKA) LED Pendants.

© 2024 Tegan Lighting. All rights reserved.

INSTALLATION & CARE GUIDELINES

3 LINEAR MULTI-KORE LED PENDANT ASSEMBLY
BUZZISQUARE BEAM SHADES

Shades are drop shipped separately fully assembled.

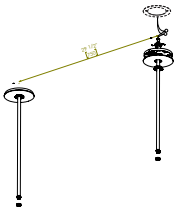

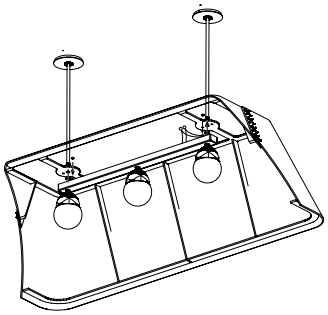

BUZZISQUARE BEAM – STEM SUSPENSION INSTALLATION

1. UNPACKING: Take care not tear or scratch fabric.
2. Shade is suspended independently from the Kore LED. Contractor to install shade to a reinforced ceiling to support the shade weight: 24 lbs (10.88kg).
3. Install stem canopies into ceiling outlet boxes. Only one is powered, the other one can be structural only and non-electrified.
4. Stem can be field cut, deburred, and gripped by the integral canopy stem collar.
5. Feed supply power, ground, & dimming wires down stem.
6. Use nuts to support shade frame on stems.
7. Hook up supply and dimming wires to driver(s).
8. Affix wireway into shade frame with nuts and re-affix rear cover.
9. MAINTENANCE: Vacuum regularly to keep clean. Do not wash. Do not remove fabric from frame. Treat stains immediately; dry clean professionally or blot with a clean soft damp cloth and a PH neutral soap.

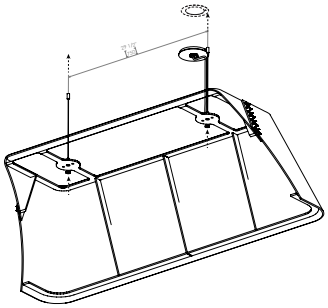

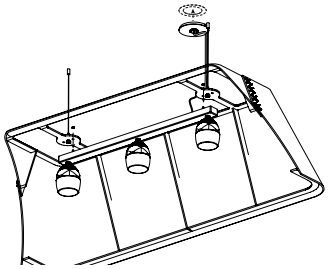

BUZZISQUARE BEAM – AC/CORD SUSPENSION INSTALLATION

1. UNPACKING: Take care not tear or scratch fabric.
2. Shade is suspended independently from the Kore LED. Contractor to install shade to a reinforced ceiling to support the shade weight: 24 lbs (10.88kg).
3. Install ceiling mounts into ceiling with supplied anchors, immediately adjacent outlet box in ceiling.
4. Thread cablegrippers into frame until tight.
5. Insert wire rope into cablegrippers and carefully raise fixture to desired height and level. Depress tip to release cable.
6. Use nuts to support shade frame on stems.
7. Hook up supply and dimming wires to driver(s).
8. Affix wireway into shade frame with nuts
9. MAINTENANCE: Vacuum regularly to keep clean. Do not wash. Do not remove fabric from frame. Treat stains immediately; dry clean professionally or blot with a clean soft damp cloth and a PH neutral soap.

© 2024 Tegan Lighting. All rights reserved.

INSTALLATION & CARE GUIDELINES

1 KORE LED PENDANT
BUZZISCONE SHADES

Shades are drop shipped separately fully assembled.

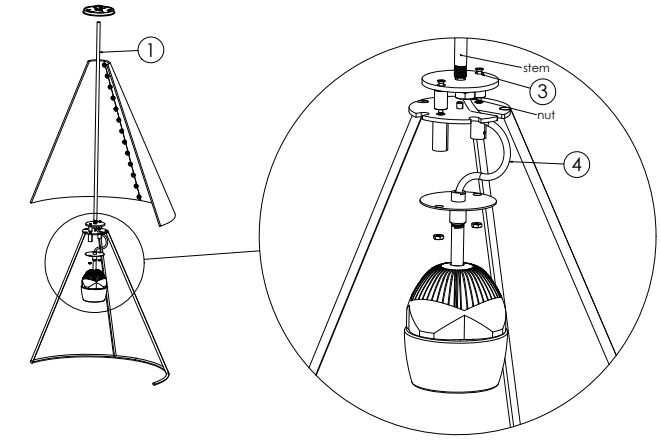

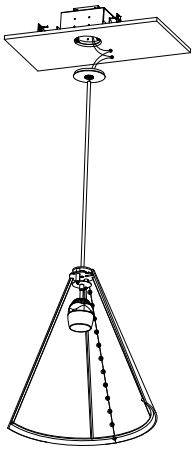

BUZZICONE INSTALLATION

1. UNPACKING: Take care not tear or scratch fabric.
2. See Kore Ambient instructions. Cut stem to insertion into canopy.
3. Dissassemble top of desired length for later screws and plate. Felt can be lifted up for access
4. Replace with provided hardware as shown.
5. Feed Kore powercord up through nut and stem.
6. Carefully assemble hardware shown, avoid pinching powercord.
7. Per typical installation instructions, attach stem to canopy and make electrical connections inside enclosure.
8. MAINTENANCE: Vacuum regularly to keep clean. Do not wash. Do not remove fabric from frame. Treat stains immediately; dry clean professionally or blot with a clean soft damp cloth and a PH neutral soap.

© 2024 Tegan Lighting. All rights reserved.

INSTALLATION & CARE GUIDELINES

1 KORE LED PENDANT
BUZZIJET SMALL, MEDIUM, LARGE, X-LARGE & XX-LARGE SHADES
Shades are drop shipped separately fully assembled.

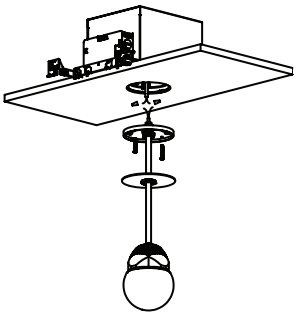

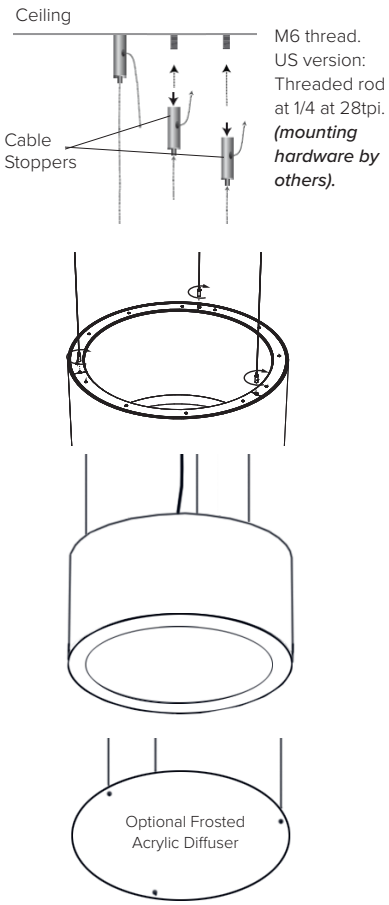

BUZZIJET SHADES INSTALLATION

1. UNPACKING: Take care not tear or scratch fabric.
2. Shade is suspended independently from the KORE LED Pendant.
   a. Contractor to install shade to a reinforced ceiling to support the shade weight:
      Small: 12.57 lbs (5.7Kg)
      Medium: 14.99 lbs (6.8Kg)
      Large: 24.25 lbs (11Kg)
      XL: 28.66 lbs (13Kg)
      XXL: 39.68 lbs (18Kg)
   b. Once location of Kore LED Pendant is determined, install (3) BUZZIPLEAT cable stoppers to ceiling (ceiling screws not included; mounting hardware by others). Thread size of cable stoppers: 1/4 @ 28tpi. Shade: Refer to Shade Installation Template for BUZZIJET on page 19.
   c. Attach BUZZI Pleat to ceiling cables with hardware provided. Adjust to desired overall height by pulling cables through cable stoppers at ceiling. Trim excess cable with wire cutter.
   d. Install Kore LED Pendant through BUZZIJET as described in Kore Ambient Instructions above.
3. Optional Frosted Acrylic Diffuser: Insert diffuser suspension cables into grippers on the hub. When visible, pull the cables from the rear (top) to reach desired location. Cut or coil up excess cable.
4. MAINTENANCE: Vacuum regularly to keep clean. Do not wash. Do not remove fabric from frame. Treat stains immediately; dry clean professionally or blot with a clean soft damp cloth and a PH neutral soap.

MULTI-KORE PENDANT ASSEMBLY (MKA)

1. See below for installation instructions for BUZZIJET Multi-Kore Assembly (MKA) LED Pendants.

© 2024 Tegan Lighting. All rights reserved.

INSTALLATION & CARE GUIDELINES

1 KORE LED PENDANT
BUZZIPLEAT MEDIUM & LARGE SHADES
Shades are drop shipped separately fully assembled.

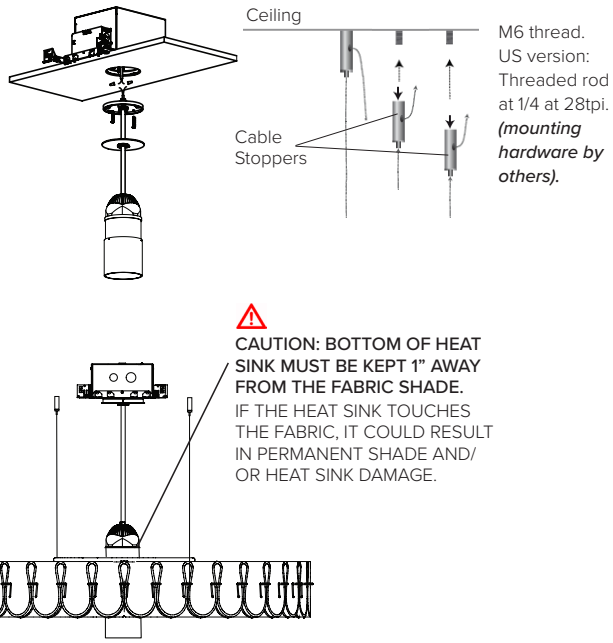

BUZZIPLEAT MEDIUM & LARGE SHADES INSTALLATION

1. UNPACKING: Take care not tear or scratch fabric.
2. Shade is suspended independently from the KORE LED Pendant.
   a. Contractor to install shade to a reinforced ceiling to support the shade weight:

BUZZI Pleat RIPPLE	BUZZI Pleat EDEL
M: 11.5 lbs (5.2g)	M: 9.3 lbs (4.2g)
L: 24 lbs (10.9kg)	L: 17.6 lbs (8.9kg)

   b. Once location of Kore LED Pendant is determined, install (3) BUZZIPLEAT cable stoppers to ceiling (ceiling screws not included; mounting hardware by others). Thread size of cable stoppers: 1/4 @ 28tpi. Shade: Refer to Shade Installation Template for BUZZIPLEAT below.
   c. Attach BUZZI Pleat to ceiling cables with hardware provided. Adjust to desired overall height by pulling cables through cable stoppers at ceiling. Trim excess cable with wire cutter.
   d. Install Kore LED Pendant Diffuser Assembly through BUZZI Pleat so **bottom of heat sink is 1" above the top of the BUZZIPLEAT shade.**
3. MAINTENANCE: Vacuum regularly to keep clean. Do not wash. Do not remove fabric from frame. Treat stains immediately; dry clean professionally or blot with a clean soft damp cloth and a PH neutral soap.

© 2024 Tegan Lighting. All rights reserved.

INSTALLATION & CARE GUIDELINES

1 KORE LED PENDANT
BUZZIPROP SHADE
Shades are drop shipped separately fully assembled.

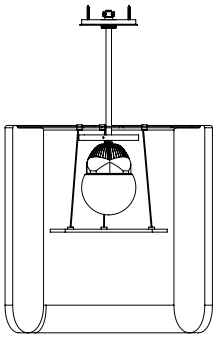

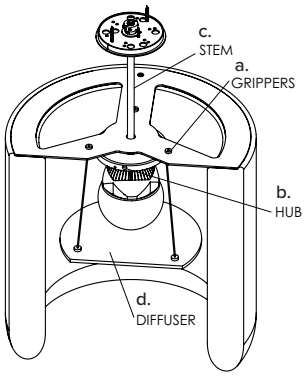

BUZZIPROP SHADES INSTALLATION

1. UNPACKING: Take care to not tear the fabric or scratch the frame.
2. Shade is suspended with the KORE LED Pendant.
   a. Install Kore LED enclosure per prior pages. Cut Stem per instructions.
   b. Affix HUB to stem using set screw about 1/4” above the Kore LED module.
   c. Install Kore LED Pendant through BUZZIPROP, feeding stem through central hole.
   d. Slide hub, retainer and canopy face over Kore LED Stem. For surface driver installations, replace canopy face with surface canopy cover. To install the stem, use Allen Key to tighten stem collar around stem to desired height.
   e. Included Frosted Acrylic Diffuser: Insert diffuser suspension cables into grippers on the top of shade. When visible, pull the cables from the rear (top) until the diffuser is almost touching the shade. Leave a small 1/2” gap for ventilation. Cut or coil up excess cable.
3. MAINTENANCE: Vacuum regularly to keep clean. Do not wash. Do not remove fabric from frame. Treat stains immediately; dry clean professionally or blot with a clean soft damp cloth and a PH neutral soap.

© 2024 Tegan Lighting. All rights reserved.

INSTALLATION & CARE GUIDELINES

3 LINEAR MULTI-KORE LED PENDANT ASSEMBLY
BUZZIPROP BEAM
Shades are drop shipped separately fully assembled.

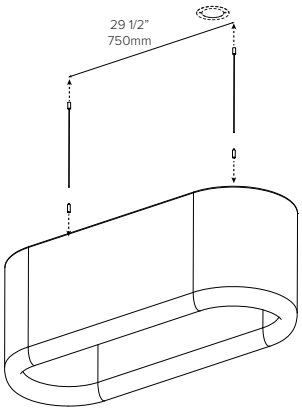

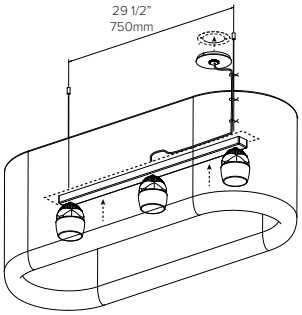

BUZZIPROP BEAM SHADE - AC/CORD SUSPENSION INSTALLATION

1. UNPACKING: Take care not tear or scratch fabric.
   a. Shade is suspended independently from the KORE LED Pendant. a. Contractor to install shade to a reinforced ceiling to support the shade weight: 33 lbs (14.97kg).
   b. Install ceiling mounts into ceiling with supplied anchors, immediately adjacent outlet box in ceiling.
   c. Thread cablegrippers into frame until tight.
   d. Insert wire rope into cablegrippers and carefully raise fixture to desired height and level. Depress tip to release cable.
   e. Affix Kore module onto frame using supplied screws.
   f. With power off, install canopy backplate to outlet box. Trim and run cable along frame, up wire rope, and through Canopy cover and nut.
   g. Dress with small zip ties. Make 120V and 0-10V connections, then affix Canopy cover and nut.
2. MAINTENANCE: Vacuum regularly to keep clean. Do not wash. Do not remove fabric from frame. Treat stains immediately; dry clean professionally or blot with a clean soft damp cloth and a PH neutral soap.

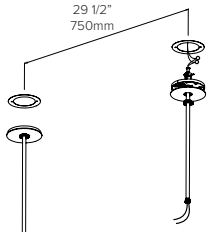

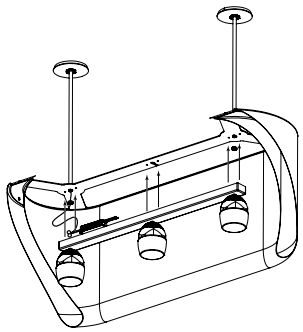

BUZZIPROP BEAM SHADES INSTALLATION

1. UNPACKING: Take care not tear or scratch fabric.
   a. Shade is suspended independently from the KORE LED Pendant. a. Contractor to install shade to a reinforced ceiling to support the shade weight: 33 lbs (14.97kg).
   b. Install stem canopies into ceiling outlet boxes. Only one is powered, the other one can be structural only and non-electrified.
   c. Stem can be field cut, deburred, and gripped by the integral canopy stem collar.
   d. Feed supply power, ground, & dimming wires down stem. Attach canopy faceplate.
   e. Use nuts to support shade frame on stems.
   f. Hook up supply and dimming wires to driver(s).
   g. Affix wireway into shade frame with nuts.
2. MAINTENANCE: Vacuum regularly to keep clean. Do not wash. Do not remove fabric from frame. Treat stains immediately; dry clean professionally or blot with a clean soft damp cloth and a PH neutral soap.

© 2024 Tegan Lighting. All rights reserved.

INSTALLATION & CARE GUIDELINES

1 KORE LED PENDANT
BUZZIDRUM SHADES
Shades are drop shipped separately fully assembled.

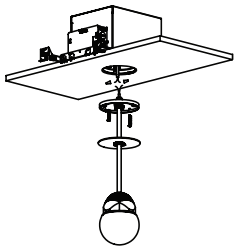

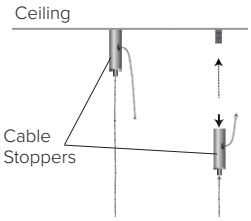

M6 thread.
US version:
Threaded rod
at 1/4 at 28tpi.
(mounting hardware by others).

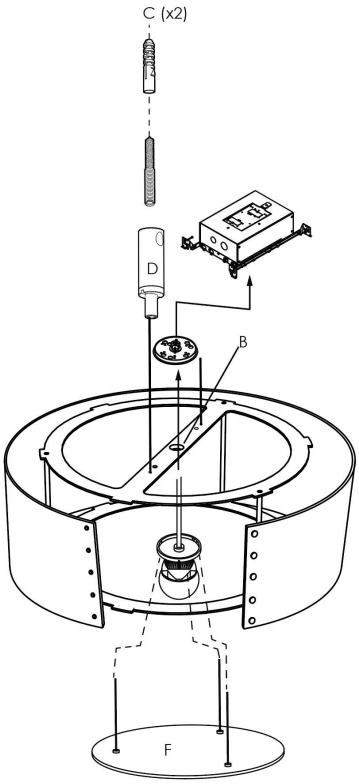

BUZZIDRUM SMALL, MEDIUM & LARGE SHADES INSTALLATION

1. UNPACKING: Take care to not tear the fabric or scratch the frame/ buttons.
2. INSTALLATION: Shade is suspended independently from the Kore LED Pendant.
   a. Contractor to install shade to a reinforced ceiling to support the shade weight:
      Small: 7.9 lbs (3.6Kg)
      Medium: 9.9 lbs (4.5Kg)
      Large: 12.05 lbs (5.5Kg)
      Contractor to Assemble BUZZI drum per instructions.
   b. Hole (B) in shade fitting must be drilled out to 5/8” (12.7mm) Dia. to allow clearance of Kore LED stem.
   c. Once location of Kore LED Pendant is determined, install (2) BUZZISHADE cable stoppers to ceiling (ceiling screws not included; mounting hardware by others). Thread size of cable stoppers: 1/4 @ 28tpi.
   d. Attach BUZZISHADE to ceiling cables with hardware provided. Adjust to desired overall height by pulling cables through cable stoppers at ceiling. Trim excess cable with wire cutter.
   e. Install Kore LED Pendant through BUZZISHADE as described in Kore Ambient Instructions on prior pages.
   f. Optional Frosted Acrylic Diffuser:
      Insert diffuser suspension cables into grippers on the hub. When visible, pull the cables from the rear (top) until the diffuser is almost touching the shade. Leave a small 1/2” gap for ventilation. Cut or coil up excess cable.
3. MAINTENANCE: Vacuum regularly to keep clean. Do not wash. Do not remove fabric from frame. Treat stains immediately; dry clean professionally or blot with a clean soft damp cloth and a PH neutral soap.

MULTI-KORE PENDANT ASSEMBLY (MKA)

1. See below for installation instructions for BUZZIDRUM Multi-Kore Assembly (MKA) LED Pendants.

© 2024 Tegan Lighting. All rights reserved.

INSTALLATION & CARE GUIDELINES

MULTI-KORE ASSEMBLY - INSTALLATION
2 OR 3 KORE QUAD HEAT SINKS
BUZZISHADE, BUZZIJET, BUZZIDRUM & BUZZISQUARE

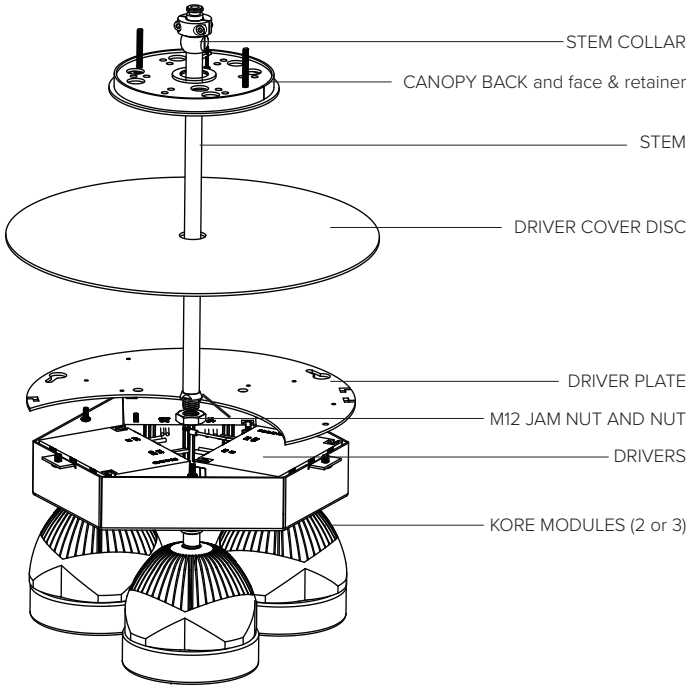

FIXTURE STEM ASSEMBLY

1. Cut fixture wiring to length + 8”. Strip cord to expose conductors.
2. Slip fixture wiring up the stem
3. With supplied M12 nut and Jamnut, secure stem threaded end into the shade driver plate. Use Threadlocker.
4. Pass stem through driver cover disc, the canopy back (and face and retainer). Tighten the two screws so the stem is securely gripped by the the two part swivel. (See step 3 for clarity.)

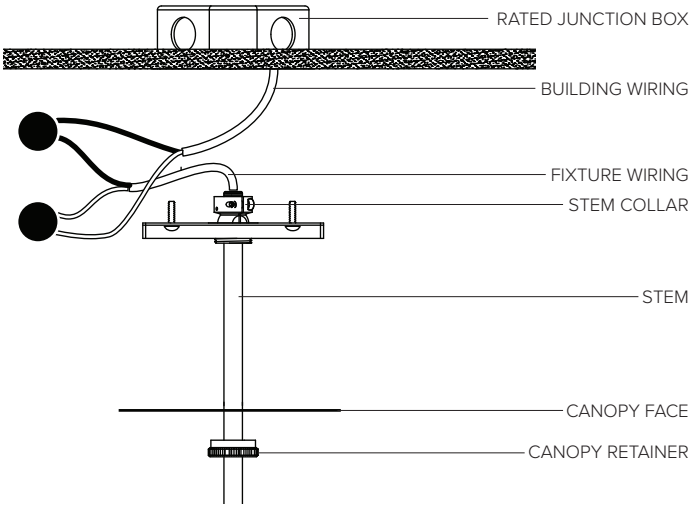

DRIVER CONNECTIONS

1. Make electrical connections with rated wire nuts or similar.
2. Use screws to affix canopy back to installed Junction box (by others). Junction box must be rated for 150 lbs and tied to building structure. Replace screws with longer threaded rod or lag bolts to connect to blocking if required.
3. Use Canopy Retainer to affix Canopy Face to Canopy Back.
4. Test by applying building power. Test dimming if applicable.

INPUT: HOT..... BLACK
INPUT: NEUTRAL ..... WHITE
INPUT: GROUND..... BARE/GREEN
INPUT: DIM PURPLE* ... PURPLE
INPUT: DIM GREY*..... GREY
*optional, may vary

© 2024 Tegan Lighting. All rights reserved.

INSTALLATION & CARE GUIDELINES

BUZZISHADE - INSTALLATION TEMPLATE - XL + XXL ONLY

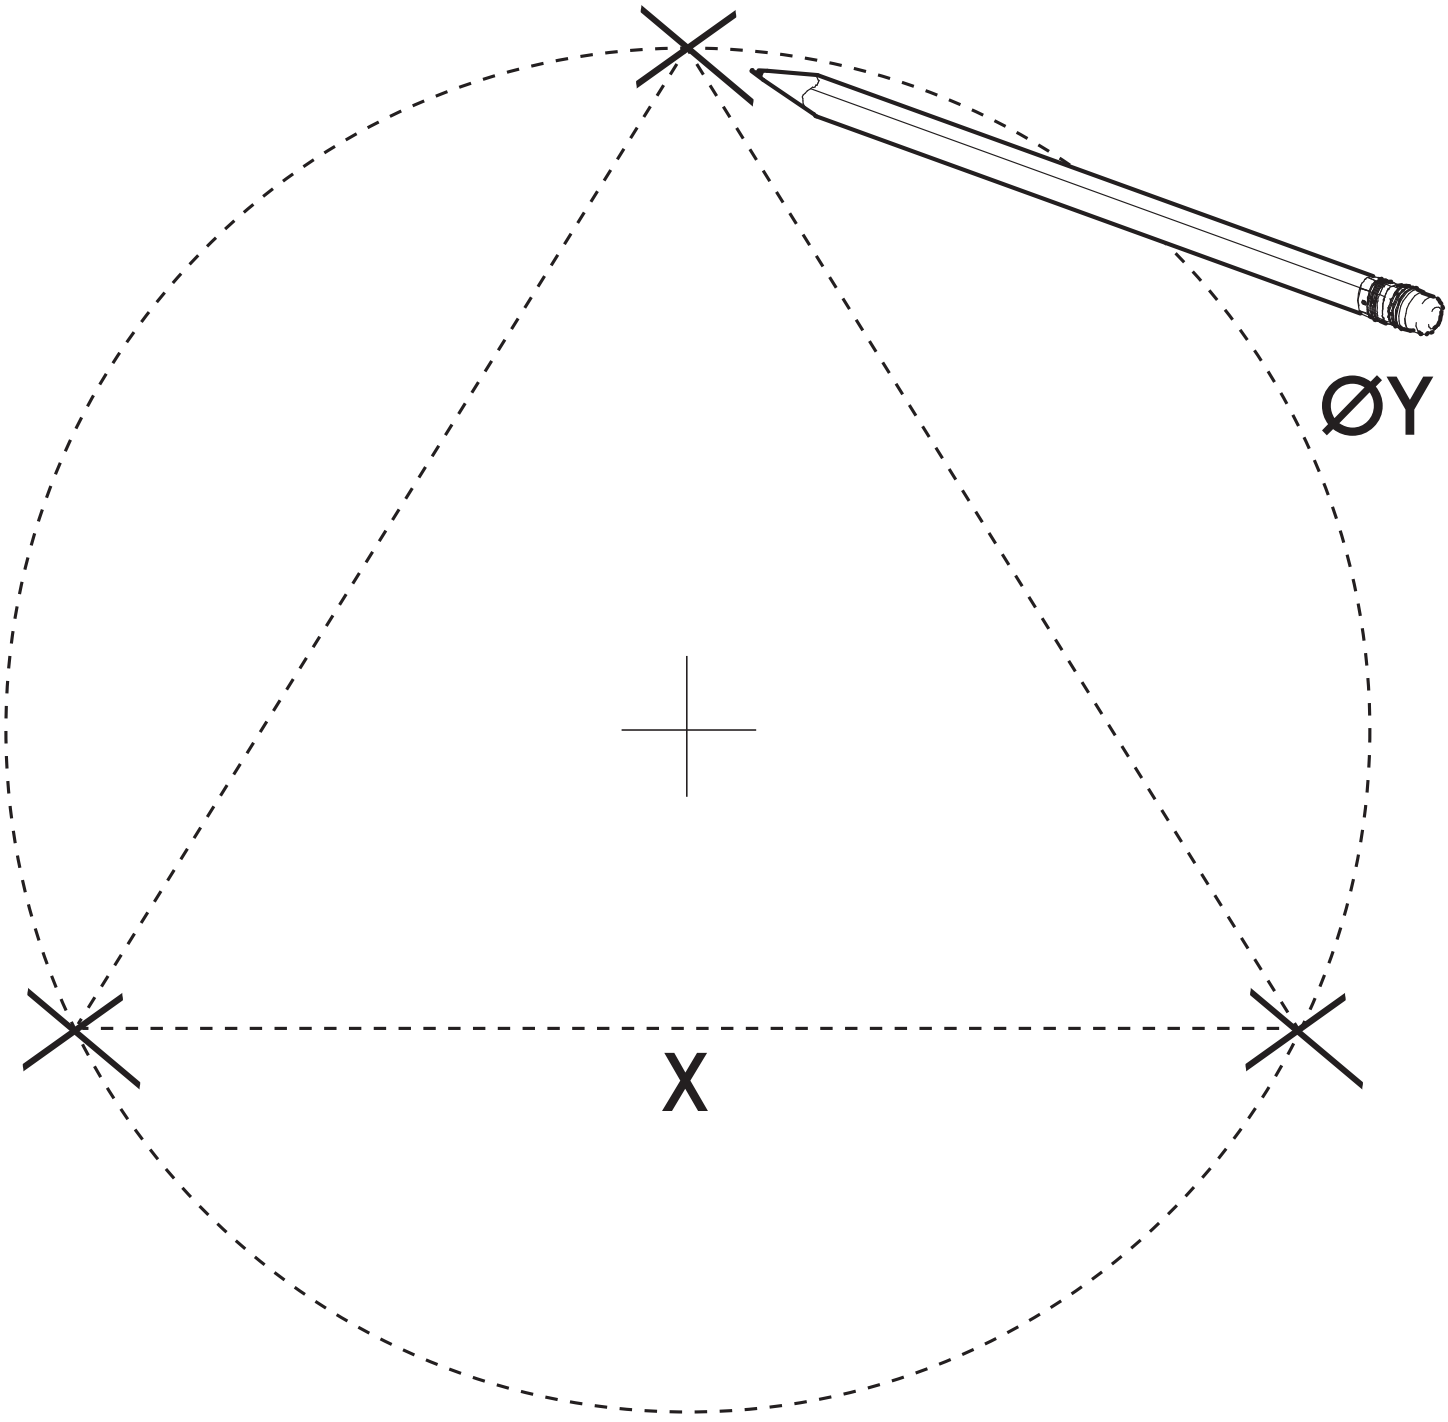

XL: X = 25.98″ Y = 29.92″
XXL: X = 32.68″ Y = 37.80″



© 2024 Tegan Lighting. All rights reserved.

INSTALLATION & CARE GUIDELINES

BUZZIJET - INSTALLATION TEMPLATE

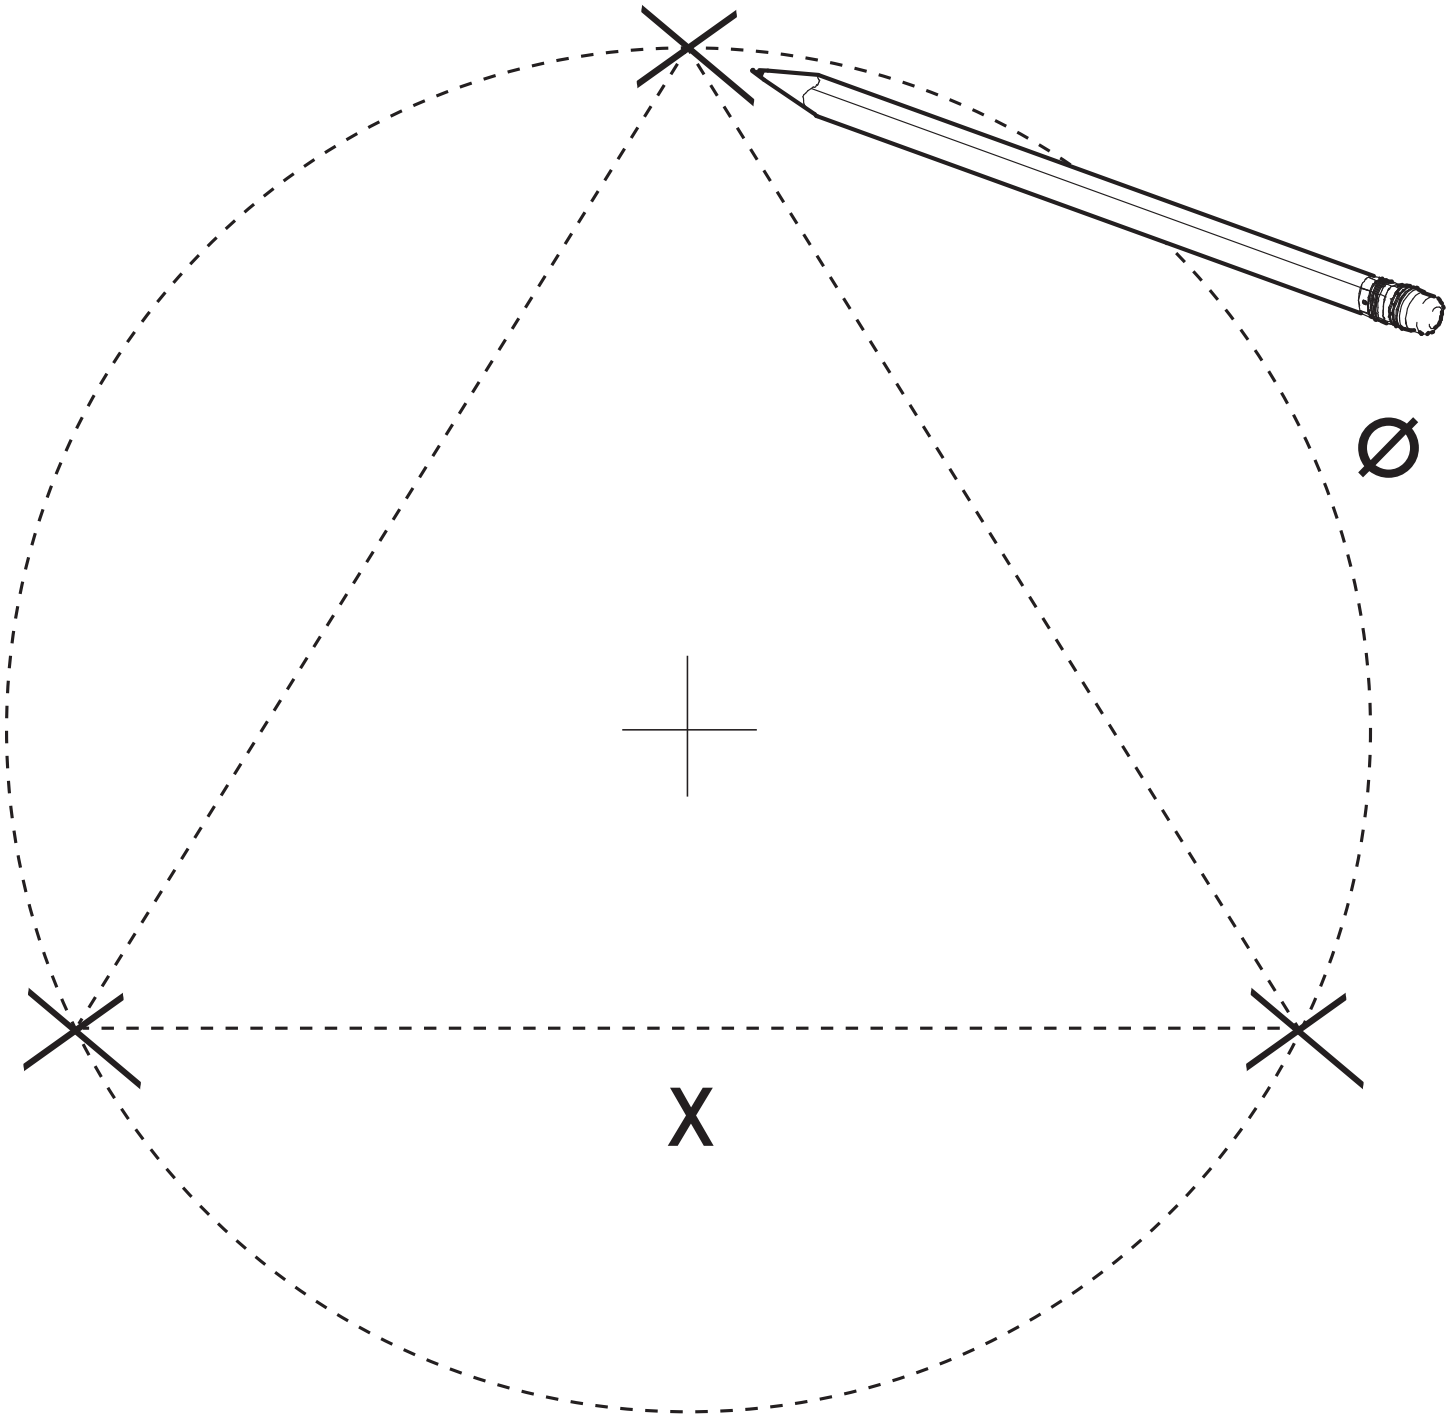

S | M: X: 64 cm Ø: 73,5 cm
X: 25.20" Ø: 28.94"
L | XL : X: 98 cm Ø: 113,5 cm
X: 38.58" Ø: 44.69"
XXL: X: 124 cm Ø: 143,5 cm
X: 48.82" Ø: 56.50"



© 2024 Tegan Lighting. All rights reserved.

INSTALLATION & CARE GUIDELINES

BUZZIPLEAT - INSTALLATION TEMPLATE

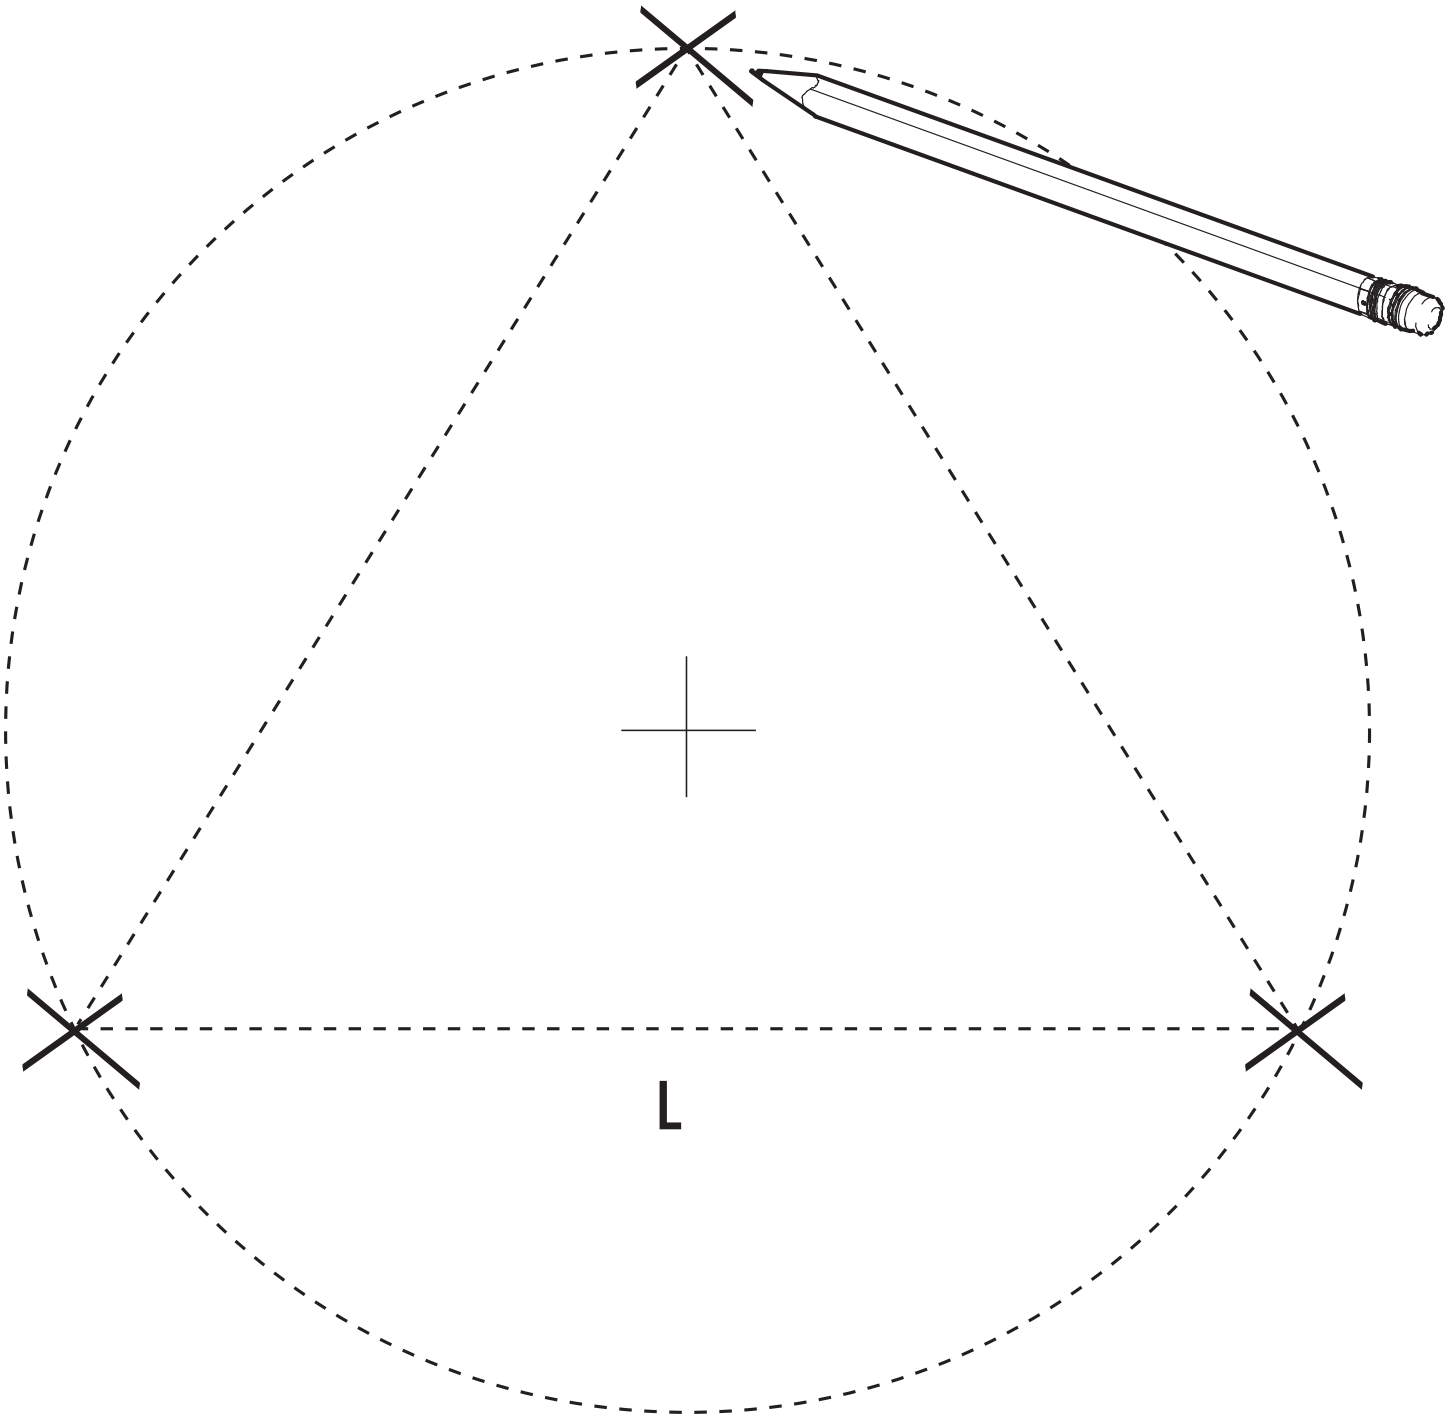

Medium	Ø: 14.57″ L: 12.60″
Large	Ø: 20.87″ L: 18.11″



© 2024 Tegan Lighting. All rights reserved.